


Rough Opening Preparation & Product Dimensions

- Allow 1/2" additional room on all sides of the rough opening (1" overall) than recommended by window manufacturers' instructions to accommodate the 1/2" tongue of ThermalBuck™.
- Consider continuous insulation and/or rainscreen depth.

Note :

For additional information please refer to following document, FMA/AAMA/WDMA 500-16 Standard Practice for the Installation of Mounting Flange Windows into Walls Utilizing Foam Plastic Insulation (FPIS) with a Separate Water-Resistive Barrier (WRB). See www. ThermalBuck.com for details.

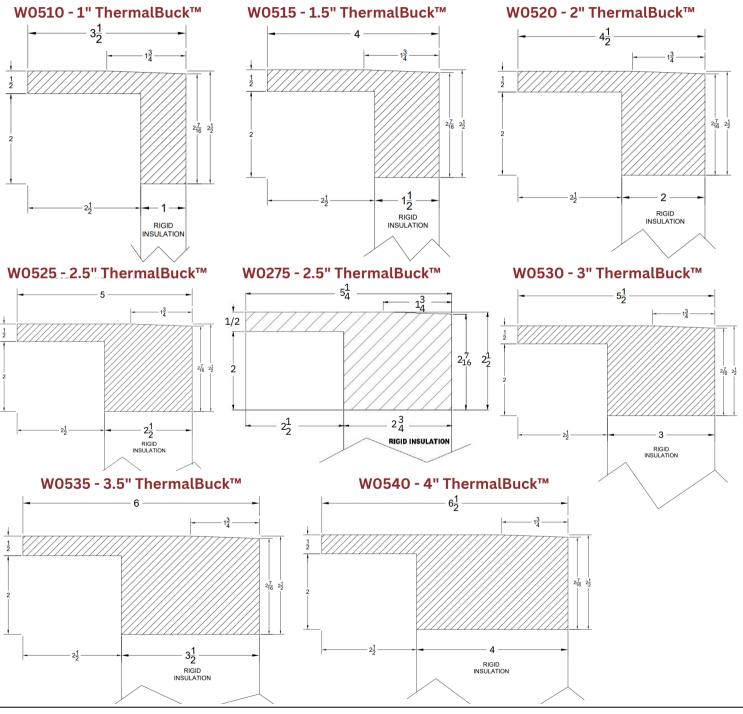

For most recent updates, please visit our website at www.brincbp.com ThermalBuck™ is proudly made in America.

BRING BUILDING PRODUCTS